

Safety Information

- Do not pull the cable when unplugging; always hold the plug to avoid damage.
- Remove the batteries from the headset for long-term storage.
- Please don't attempt to modify or repair the headset without proper training and tools.
- Prohibited from prolonged immersion in water.
- Keep the headset away from fire or extreme heat.
- Dispose of electronic products according to local regulations.

Warranty Service

1. For headphones purchased from RayTalk, you are entitled to after-sales repair services provided by our company or authorized suppliers in case of product quality issues.
2. We offer a one-year limited warranty for our products, starting from the date of receipt of the goods.
3. During the warranty period, we will repair or replace products for various defects caused by raw materials or manufacturing processes, depending on the specific circumstances.

The above warranty does not include the following:

1. Products beyond the warranty period.
2. Unauthorized dismantling and repair.
3. Failed to adhere to the product instructions, resulting in damage.
4. Damage caused by force majeure events, such as immersion, moisture, mold, and natural disasters, will not be covered under our warranty.
5. Natural aging and regular use may cause consumables to wear and tear, which are not covered under the warranty.

- PH-700A User Guide and more available at www.raytalkcomms.com

RayTalk Communications Ltd

86 0755 83017294

sales@raytalkcomms.com

www.raytalkcomms.com

3rd Floor, Building C, Kemron Science & Technology Park, Guansheng 5th Road,
Guanlan, Longhua District, Shenzhen, China, 518110

 


USER GUIDE

PH-700A ANR Aviation Headset with Bluetooth



What's in the Box

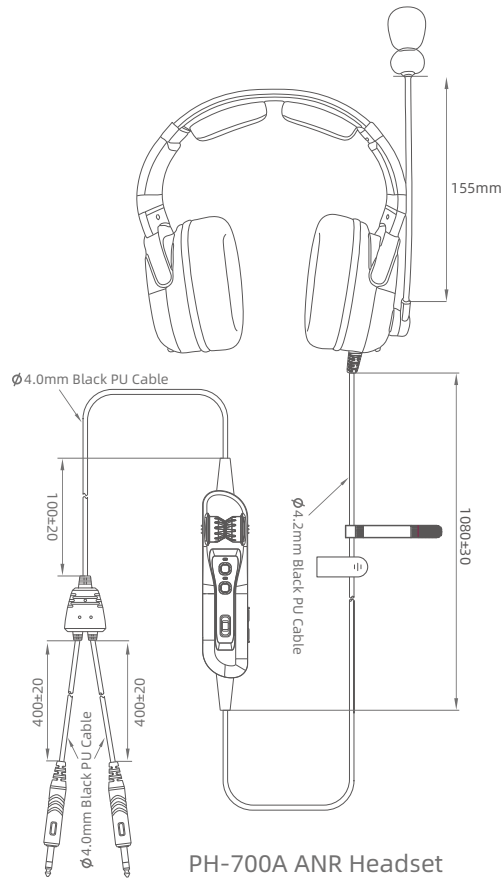

***Note:**



2 AA batteries
(not included)

PH-700A ANR Headset

 
Specifications

TYPE	INTERCOM		NOISE REDUCTION	
	SPEAKER	MICROPHONE	SPEAKER	MICROPHONE
Size	39.8*9mm	9.85*5.5*2.6mm	39.8*9mm	6*2.2mm
Type	Dynamic	Silicon Wheat	Dynamic	Capacitors
Impedance	32Ω±10%	2.2KΩ	32Ω±10%	2.2KΩ
Sensitivity	110±3dB	-54±3dB	110±3dB	-39±3dB
Directivity	/	Bi-Directional	/	Omni-Directional


Operation Instructions



Locate the left (L) and right (R) icons inside the earcups to orient the headset properly.

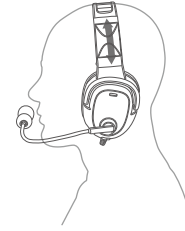

 Place the headset on your head. Adjust the headband so the ear cushions completely cover your ears.

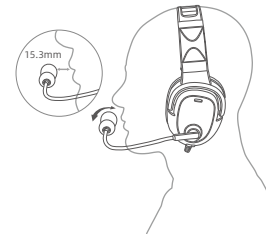

Grasp the microphone base and adjust the boom so the microphone is positioned 0.6" (15.3 mm) from your lips.



 
Place the headset in the carry case and position the mic over the headband to prevent boom chafing.

Press and hold Power button >2s to turn on or off.

Press and hold the Bluetooth button >2s to turn on or off. When turning on, press once after the prompt to enter pairing mode.


Call Handling
 Answer a call: Short press the Bluetooth button.
 End a call: Short press the Bluetooth button.
 Reject a call: Press and hold the Bluetooth button >1s.
 Redial last number: Double press the Bluetooth button.

3-Way Audio Priority Switch: AUTO) Intercom Priority, MIX) All Audio Sources, OFF) Intercom Only

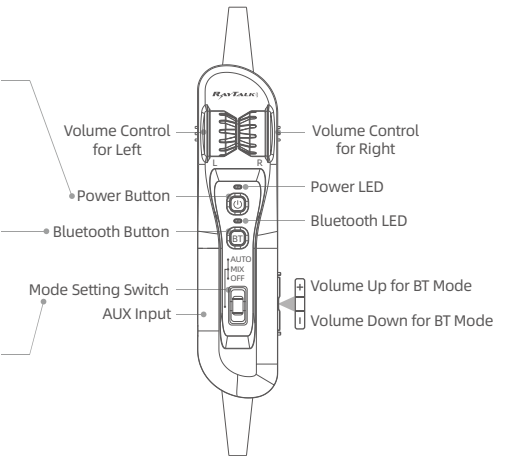

Mono and Stereo switch

 Default Setting: Mono Mode

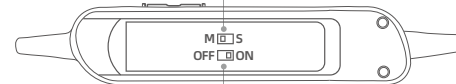

Auto Power-Off Switch

ON: When the headset is not plugged into the intercom, it will turn off automatically after 1 h if music is playing, or after 10 min if no music is playing.

OFF: The headset remains on regardless of connection or playback status; no auto shut-down will occur.